

Environment Monitoring Sensor Featuring LoRaWAN®

IOT-S500TH/WD/MCS

USER MANUAL

LINOVISION

Updated on Apr 11, 2022

Applicability

This guide is applicable to IOT-S500TH/WD/MCS sensors shown as follows, except where otherwise indicated.

Model	Description
IOT-S500TH	Temperature and Humidity Sensor
IOT-S500MCS	Magnet Switch Sensor
IOT-S500WD-P	Spot Leak Detection Sensor


Safety Precautions

Linovision will not shoulder responsibility for any loss or damage resulting from not following the instructions of this operating guide.


- ❖ The device must not be remodeled in any way.
- ❖ The device is not intended to be used as a reference sensor, and Linovision will not should responsibility for any damage which may result from inaccurate readings.
- ❖ Do not place the device close to objects with naked flames.
- ❖ Do not place the device where the temperature is below/above the operating range.
- ❖ Make sure electronic components do not drop out of the enclosure while opening.
- ❖ When installing the battery, please install it accurately, and do not install the reverse or wrong model.
- ❖ Make sure both batteries are newest when install, or battery life will be reduced.
- ❖ The device must never be subjected to shocks or impacts.

Declaration of Conformity

IOT-S500TH/WD/MCS is in conformity with the essential requirements and other relevant provisions of the CE, FCC, and RoHS.

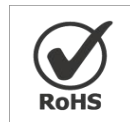

All information in this guide is protected by copyright law. Whereby, no organization or individual shall copy or reproduce the whole or part of this user guide by any means without written authorization from Hangzhou Linovision Co., Ltd.

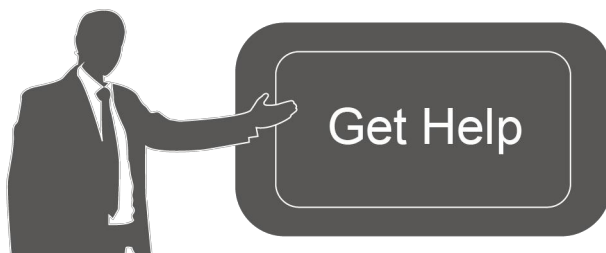

For assistance, please contact
Linovision technical support:
Email: support@linovision.com
Tel: +86-571-8670-8175
Website: www.linovision.com

Contents

1. Product Introduction	4
1.1 Overview.....	4
1.2 Features.....	4
2. Hardware Introduction	4
2.1 Packing List	4
2.2 Product Overview.....	5
2.3 Dimensions(mm).....	5
2.4 Power Button	6
3. Basic Configuration	6
3.1 Configuration via Smartphone APP.....	6
3.1.1 Read/Write Configuration via NFC.....	6
3.1.2 Template Configuration.....	8
3.3 Configuration Examples.....	8
3.3.1 LoRa Channel Settings	8
3.3.2 Alarm Settings	9
4. Installation	10
5. Cloud Management.....	11
5.1 Add a Gateway	11
5.2 Add IOT-S500TH/WD/MCS to Cloud.....	12
6. Sensor Payload.....	13
Appendix	14
Default LoRaWAN Parameters	14

1. Product Introduction

1.1 Overview

IOT-S500TH/WD/MCS is a sensor mainly used for outdoor environment through wireless LoRa network. IOT-S500TH/WD/MCS device is battery powered and designed for multiple mounting ways. It is equipped with NFC (Near Field Communication) and can easily be configured by a smartphone or a PC software.

Sensor data are transmitted in real-time using standard LoRaWAN[®] protocol. LoRaWAN[®] enables encrypted radio transmissions over long distance while consuming very little power. The user can obtain sensor data and view the trend of data change through the Cloud or through the user's own Network Server.

1.2 Features

- Up to 11km communication range
- Easy configuration via NFC
- Standard LoRaWAN[®] support
- Low power consumption with 4000mAh replaceable battery

2. Hardware Introduction

2.1 Packing List



1 × IOT-S500TH/WD/
MCS Sensor



Wall Mounting
Kits



1 ×
Warranty Card



1 ×
Quick Guide



Double Sided Tape (for
WD or MCS sensor)




Mounting Screws (for
WD or MCS sensor)




If any of the above items is missing or damaged, please contact your sales representative.

2.2 Product Overview

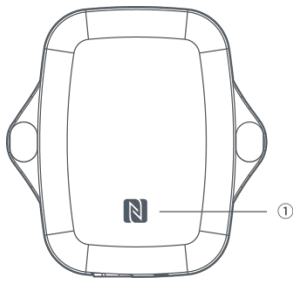

Front View:
① NFC Area




Bottom View:

② Vent

③ Waterproof Connectors

(For water leakage and magnet switch sensor)

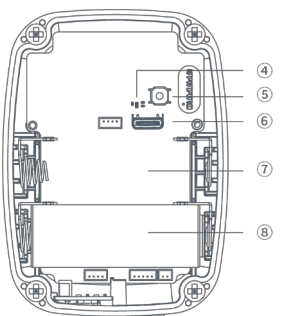

Internal View:

④ LED


⑤ Power Button

⑥ USB Type-C

⑦ Expandable Battery Slot

⑧ Battery

2.3 Dimensions(mm)

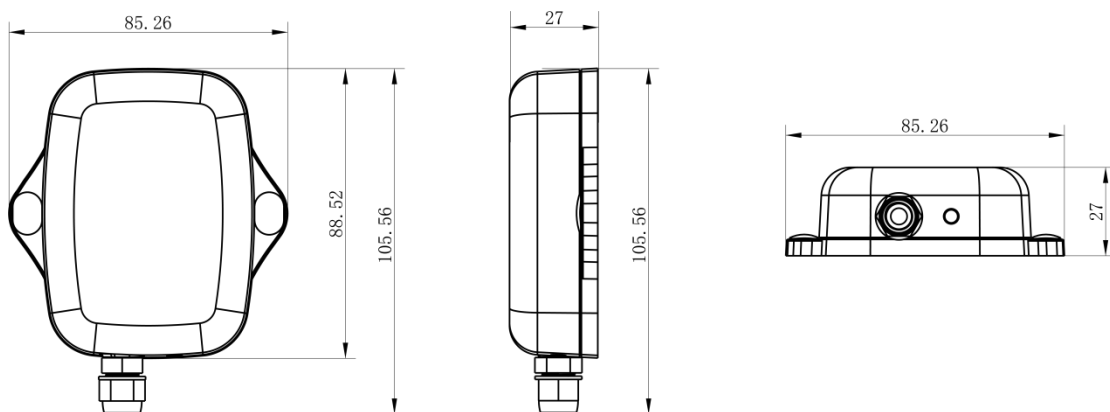

2.4 Power Button

Note: The LED indicator and power button are inside the device. IOT-S500TH/WD/MCS can also be turned on/off and reset via Mobile APP or Toolbox.

Function	Action	LED Indication
Turn On	Press and hold the button for more than 3 seconds.	Off → Static Green
Turn Off	Press and hold the button for more than 3 seconds.	Static Green → Off
Reset	Press and hold the button for more than 10 seconds. Note: IOT-S500TH/WD/MCS will automatically power on after reset.	Blink 3 times.
Check On/Off Status	Quickly press the power button.	Light On: Device is on. Light Off: Device is off.

3. Basic Configuration

IOT-S500TH/WD/MCS sensor can be monitored and configured via one of the following methods:

- Mobile APP (NFC);
- Windows software (NFC or Type-C port).

In order to protect the security of sensor, password validation is required when configuring via unused phone . Default password is **123456**.

3.1 Configuration via Smartphone APP


Preparation:

- Smartphone (NFC supported)
- Toolbox APP: download and install from Google Play or Apple Store.

3.1.1 Read/Write Configuration via NFC


1. Enable NFC on the smartphone and open "Toolbox" APP.
2. Attach the smartphone with NFC area to the device to read basic information.

Note: Ensure your smartphone NFC area and it is recommended to take off phone case before using NFC.

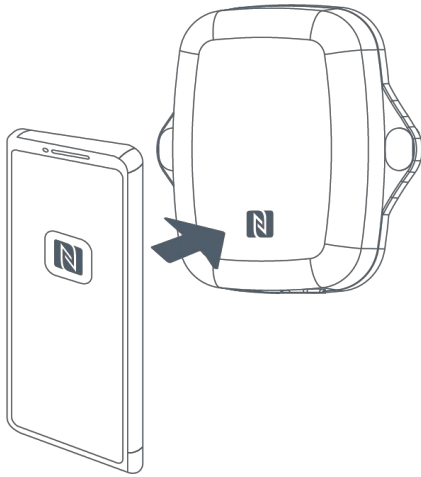

Menu	
Status	Setting
SN	6136A347154022
Model	
Device EUI	24e124136a347154
Firmware Version	V1.11
Hardware Version	V2.0
Device Status	Off <input type="checkbox"/>

3. Change the on/off status or parameters, then attach the smartphone with NFC area to the device until the APP shows a successful prompt.

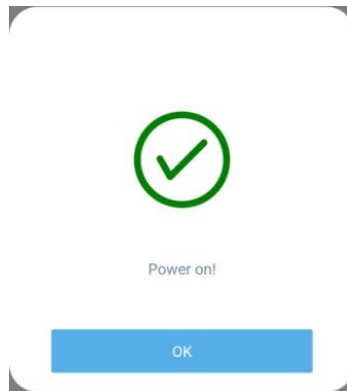

4. Go to "Device > Status" to tap "Read" and attach the smartphone with NFC area to the device to read real-time data of sensor.


Menu	
Status	Setting
Model	
Device EUI	124136a347154
Firmware Version	V1.11
Hardware Version	V2.0
Device Status	ON <input checked="" type="checkbox"/>
Join Status	De-activated
RSSI/SNR	0/0
Temperature	27.5 °C
Humidity	58.5 %
Leakage status	No leak
<input type="button" value="Read"/>	
Device	Template

3.1.2 Template Configuration

Template settings only work for easy and quick device configuration in bulk.


Note: Template function is allowed only for sensors with the same model and LoRa frequency band.

1. Go to “Template” page on the APP and save current settings as a template.

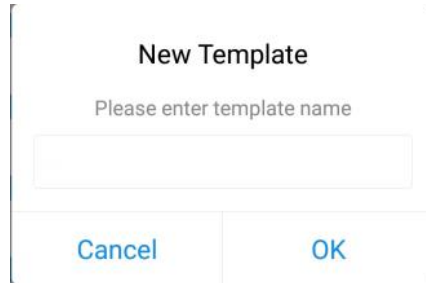


2. Attach the smartphone with NFC area to another device.

3. Select the template file from Toolbox APP and tap “Write”, keep the two devices close until the APP shows a successful prompt.

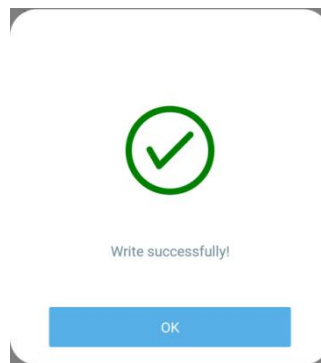

4. Slide the template item to the left to edit or delete the template.

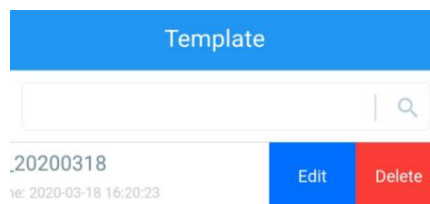

3.3 Configuration Examples

3.3.1 LoRa Channel Settings

The configuration of LoRaWAN® channel of IOT-S500TH/WD/MCS must match the gateway's. Refer to Appendix to check default channel settings of IOT-S500TH/WD/MCS.

Mobile APP Configuration:

Open Toolbox APP and go to “Device ->Setting -> LoRaWAN Settings” to change the frequency and channels.

Software Configuration:

Log in Toolbox and go to“LoRaWAN Settings –>Channel”to change frequency and channels.

Note: If frequency is one of CN470/AU915/US915,you can enter the index of the channel that you want to enable in the input box, making them separated by commas.

Examples:

1, 40: Enabling Channel 1 and Channel 40

1–40: Enabling Channel 1 to Channel 40

1–40,60: Enabling Channel 1 to Channel 40 and Channel 60

All: Enabling all channels

Null: Indicates that all channels are disabled

The screenshot shows the 'Setting' tab with 'Support Frequency' set to 'US915'. Below it, the 'Enable Channel Index' is set to '0-71'. A table lists channel indices and their corresponding frequency ranges in MHz.

Index	Frequency/MHz
0 - 15	902.3 - 905.3
16 - 31	905.5 - 908.5
32 - 47	908.7 - 911.7
48 - 63	911.9 - 914.9
64 - 71	903.9 - 914.2

The screenshot shows the 'LoRaWAN > Channel' settings. The 'Support Frequency' is set to 'AU915' and the 'Enabled Channel Index' is '0-71'. A table lists channel indices, frequency ranges, channel spacing, and bandwidth.

Channel Index	Frequency/MHz	Channel Spacing/MHz	BW/kHz
0 - 15	915.2 - 918.2	0.2	125
16 - 31	918.4 - 921.4	0.2	125
32 - 47	921.6 - 924.6	0.2	125
48 - 63	924.8 - 927.8	0.2	125
64 - 71	915.9 - 927.1	1.6	500

Note:
64 channels numbered 0 to 63 utilizing LoRa 125 kHz BW starting at 915.2 MHz and incrementing linearly by 0.2 MHz to 927.8
8 channels numbered 64 to 71 utilizing LoRa 500 kHz BW starting at 915.9 MHz and incrementing linearly by 1.6 MHz to 927.1

3.3.2 Alarm Settings

When water leakage sensor or magnet switch sensor is triggered, it will send alarm message once by default. Toolbox allows users to change the alarm reporting interval and reporting times.

Mobile APP Configuration:

Open Toolbox APP and go to“Device –> Setting –> Threshold Settings”to enable the threshold settings and input the threshold.

The screenshot shows the 'Threshold Settings' screen. It includes a toggle for 'CO2' which is turned on. Below it, there are input fields for 'Over / ppm' (set to 1000) and 'Below / ppm' (set to 0). At the bottom, there is a 'Collecting Interval' set to 3 minutes.

Software Configuration:



Log in Toolbox and go to “Device Settings -> Basic -> Threshold Settings” to enable the calibration and input the calibration value.

Alarm Settings ?

Leakage Alarm	<input checked="" type="checkbox"/>
Alarm reporting interval	<input type="text" value="1"/> min
Alarm reporting times	<input type="text" value="2"/>



4. Installation

1. Attach IOT-S500TH/WD/MCS to the wall and mark the two holes on the wall. The connecting line of two holes must be a horizontal line.
2. Drill the holes according to the marks and screw the wall plugs into the wall.
3. Mount the IOT-S500TH/WD/MCS to the wall via mounting screws.
4. Cover the mounting screws with screw caps.

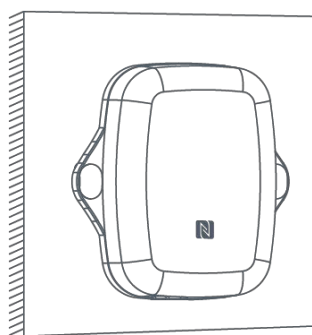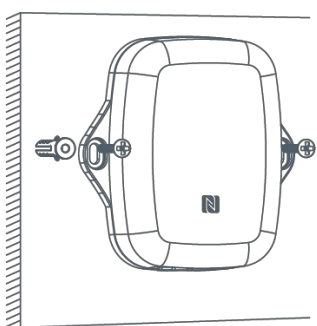

5. For leak detection sensor, install the probe/cable to the place where liquid may leak. For magnet s witch sensor, install the magnet beside the door/window.

Note: For IOT-S500WD sensor, please ensure the metal pins of the probe are flat on the floor. The probe or cable of water leakage sensor should be placed in an area of concern where water from a leak would likely accumulate.

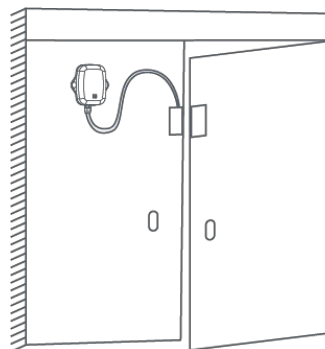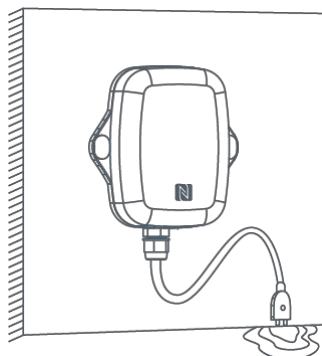


5. Cloud Management

IOT-S500TH/WD/MCS sensor can be managed by Cloud platform. Cloud is a comprehensive platform that provides multiple services including device remote management and data visualization with the easiest operation procedures.



5.1 Add a Gateway


1. Click “Enable” and choose mode in gateway web GUI.

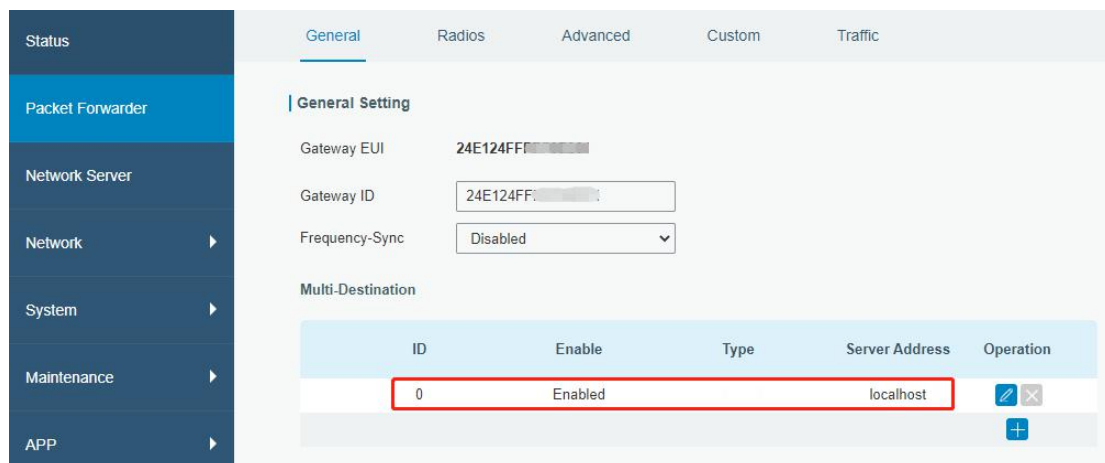Note: Ensure gateway has accessed the Internet.



The screenshot shows the 'General Setting' page for a gateway. The 'Multi-Destination' section contains a table with the following data:


ID	Enable	Type	Server Address	Operation
0	Enabled		localhost	 

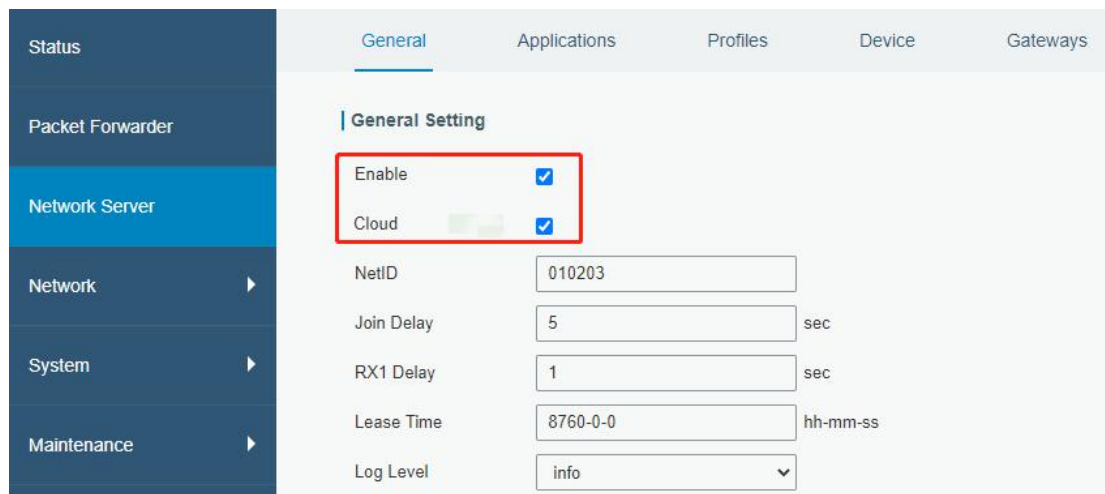


The screenshot shows the 'General Setting' page for a gateway. The 'Cloud' section contains the following settings:

Enable	<input checked="" type="checkbox"/>
Cloud	<input checked="" type="checkbox"/>
NetID	<input type="text" value="010203"/>
Join Delay	<input type="text" value="5"/> sec
RX1 Delay	<input type="text" value="1"/> sec
Lease Time	<input type="text" value="8760-0-0"/> hh-mm-ss
Log Level	<input type="text" value="info"/>

2. Go to “My Devices” page and click “+New Devices” to add gateway to Cloud via SN. Gateway will be added under “Gateways” menu.

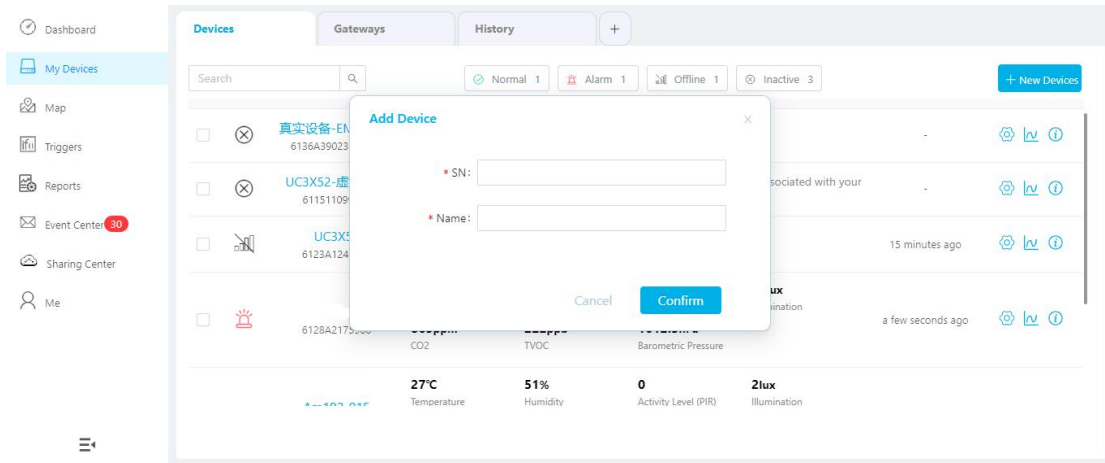


1. Check if gateway is online.

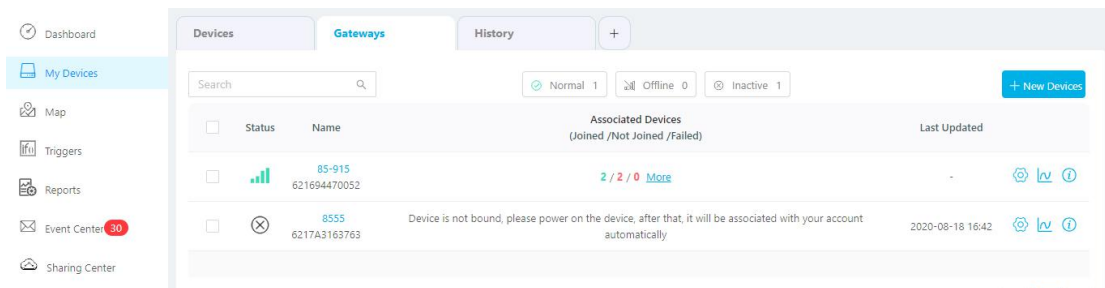


5.2 Add IOT-S500TH/WD/MCS to Cloud

1. Go to “Device->My Devices” and click “Add Device”. Fill in the SN of IOT-S500TH/WD/MCS sensor and select associated gateway.

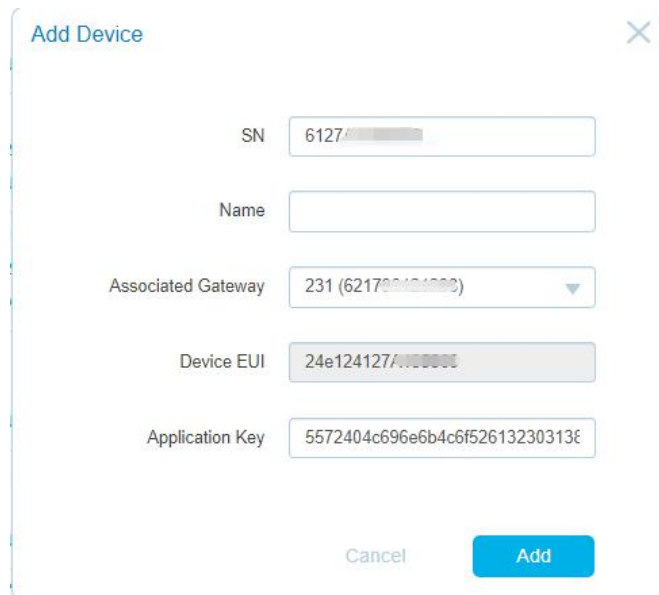

2. After sensor is connected to Cloud, you could check the device information and data and create dashboard for it.

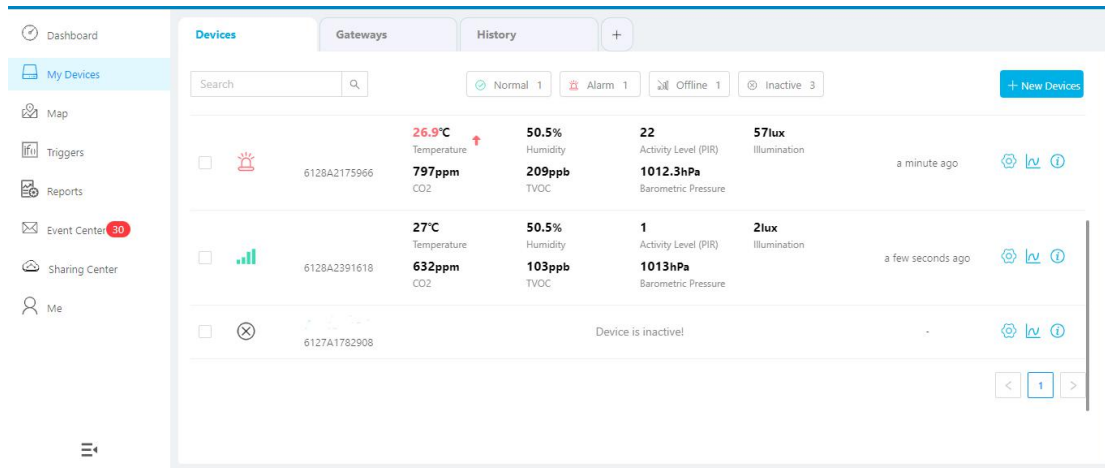

6. Sensor Payload

All data are based on following format:

Channel1	Type1	Data1	Channel2	Type2	Data2	Channel 3	...
1 Byte	1 Byte	N Bytes	1 Byte	1 Byte	M Bytes	1 Byte	...

Uplink Packet(HEX)

Channel	Type	Data Example	Description
01	75(Battery Level)	64	64=>100 Battery level =100%
03	67 (Temperature)	10 01	10 01 =>01 10 = 272 Temp=272*0.1=27.2°C
04	68(Humidity)	71	71=>113 Hum=113*0.5=56.5%
05	00	00	Not water leakage
		01	Water leakage
06	00	00	Magnet switch closed
		01	Magnet switch open
ff	01	01	V1
	08 (Device SN)	64 10 90 82 43 75 00 01	Device SN is 6410908243750001
	09 (Hardware Version)	01 40	V1.4

	0a(Software Version)	01 14	V1.14
	0f(Device Type)	00	Class A

Downlink Packet(HEX)

Channel	Type	Data Example	Description
ff	03(Set Reporting Interval)	b0 04	b0 04 =>04 b0 = 1200s

Appendix

Default LoRaWAN Parameters

DevEUI	24E124 + 2 nd to 11 th digits of SN e.g. SN = 61 26 A1 01 84 96 00 41 Then Device EUI =24E124126A101849
AppEUI	24E124C0002A0001
Appport	0x55
NetID	0x010203
DevAddr	The 5 th to 12 th digits of SN e.g. SN = 61 26 A1 01 84 96 00 41 Then DevAddr =A1018496
AppKey	5572404C696E6B4C6F52613230313823
NwkSKey	5572404C696E6B4C6F52613230313823
AppSKey	5572404C696E6B4C6F52613230313823

-END-